

Continue



Petsafe collar instructions

Your new PetSafe Elite Bark Control Collar is here! To get started, adjust the collar according to your dog's neck size, and turn off the battery before fitting. Make sure probes are centered on your dog's neck while they stand, with only one finger between the probe and the skin. Adjust the strap until it fits snugly. To loosen or tighten, move the strap through the Slide Buckle then pull through the Fasten Buckle. Don't wear the collar for more than 12 hours to prevent irritation. For a proper fit, trim the excess strap if needed, leaving space for your dog's growth. Now, follow these steps: Mark the strap at least 2 inches past the slide buckle and remove the collar. Trim the strap, then apply a flame to seal the cut edge. Place the battery in the collar and twist the coin to turn it on. The light will be green, then orange when ready. To test, hold the collar with the light facing up and drag across a hard surface while blowing air towards it. Watch for the red light and listen for the beep. To ensure continued use of the Boundary, regular training sessions with your pet are necessary. It's crucial to secure the collar correctly, as an ill-fitting one can cause skin irritation ranging from redness to bed sores. If a rash or sore appears, discontinue collar usage until it heals. For pets sensitive to contact pressure, using stainless steel contacts is recommended. Regularly check your pet's tolerance for the collar and test the containment field width after adjustments to prevent unintended corrections. When using a collar and leash, ensure the extra collar doesn't put pressure on the contact points. Always remove the Receiver Collar before performing transmitter testing. Avoid using AC circuits protected by GFCI or RCD. PetSafe products aim to promote a lifestyle of protection, teaching, and love, influencing memories for a lifetime. For product information and training guidance, visit our website at www.petsafe.net or contact Customer Care Center at 1-800-732-2677. To adjust Static Correction Level follow these steps: 1. Remove clear plastic cover with Test Light D Tool to expose Correction Level Button (D). 2. Press and release Correction Level Button when Receiver Indicator Light is lit up (E). 3. Series of flashes from Receiver Indicator Light represent current Static Correction Level. 4. If collar set at level 2 or above, it automatically increases correction level based on pet's time in zone. 5. Low battery indicator flashes every 4-5 seconds. In the unlikely event of over-correction, this feature limits static correction duration to 30 seconds. Indicator Light Response Table: | Flashes | Level | Function | | --- | --- | | | 1 Flash | No Static Correction, Tone Only | Initial Training Mode: Timid or Average Pet Temperament | | 2 Flashes | Low Static Correction | Initial Training Mode: High Energy Pet Temperament | | 3 Flashes | Medium Static Correction | Initial Training Mode: Average or High Energy Pet Temperament | | 4 Flashes | Medium High Static Correction | Initial Training Mode: Timid or Average Pet Temperament | | 5 Flashes | High Static Correction | Indicates Low Battery | To ensure proper fit and placement of Receiver Collar: 1. Make sure battery is not installed. 2. Start with pet standing comfortably (F). 3. The Receiver Collar should be snug, yet loose enough to allow one finger between contact point and neck (G). 4. Allow your pet to wear the collar for several minutes then recheck fit. Operating and Training Guide for In-Ground Fence System: The Receiver Collar's beeping persists, yet the pet remains unresponsive to Static Correction. Possible Solutions: • Replace the battery in the Receiver Collar. • Adjust the Boundary Width Control knob clockwise to increase the activation distance from the Boundary Wire. • Ensure the Boundary Control Switch is set according to the amount of Boundary Wire used. If the problem persists, refer to the In-Ground Fence Operating and Training Guide for further assistance. Important Safety Precautions: • The system should only be used with healthy pets. Consult a veterinarian if you have concerns about your pet's medical condition. • The PetSafe In-Ground Fence is designed for residential use only. • Static Correction is intended to startle, not punish, and will not cause harm. Regular Maintenance: Test the Receiver Collar at least once a month to ensure it is functioning properly. If issues persist, contact Customer Care Center at 1-800-732-2677 or visit www.petsafe. Terms of Use and Limitation of Liability: Harmful interference and undesired operation are possible with this device. We must accept any interference received. Contact Customer Care for assistance. This product comes with a limited manufacturer's warranty. Visit our website or send an envelope to learn more about the warranty terms. The PetSafe In-Ground Fence is not a solid barrier, but rather a deterrent designed to remind pets to stay within the established boundary using static correction. Proper collar fit is crucial to avoid skin damage. Avoid leaving the collar on for too long or making it too tight. Important safety information includes warning you of potential personal injury hazards and hazardous situations that could result in death or serious injury. Use this product with caution, especially if your dog is aggressive. Consult a veterinarian or certified trainer if unsure. Setting up the wireless fence will take about one day, and at least 14 days of training are recommended. Environmental factors like metal sheds may affect the fence signal. Please have the following items from the box: plug in the collar to start charging, and connect the adapter to the power jack. 1. Put the attachment on the collar. 2. Insert the adapter into a standard electrical outlet. 3. Unplug when you see a solid green light on the collar, which means it's fully charged. Charging may take up to three hours. 4. Each charge lasts around 3 weeks based on usage frequency. 5. The base unit sends out a round signal for the wireless fence and must be placed in the middle of your desired pet area. 6. Before installing, check if you need more or less coverage depending on the high/low switch. 7. Use the boundary control dial to set the distance between the base unit and the boundary. 8. If needed, use our fencing planning tool for help. 9. Place the base unit 2-4 feet above the ground and away from metal objects. 10. Attach the adapter to the power jack on the bottom of the base unit. 11. Plug in the adapter and mount the base unit using the included bracket. 12. After charging, unplug the collar and follow these steps: a) Press the button for 7 seconds to turn it on. b) The light will flash green, then red, indicating the level. c) Press again quickly to increase levels or press slowly to decrease them until you reach level 1. 13. To test the collar and boundary: a) Hold the probes against the wire in the test tool. b) Position the collar under the tool at your pet's height. c) Walk towards the boundary, listening for the beep and looking for flashes on the tool. d) Place flags where the collar beeps to mark the boundary zone. 14. Adjust the collar for a proper fit by: a) Swapping short probes with long ones if needed. b) Tightening the probes until resistance is felt. c) Centering the probes on your pet's neck and adjusting the strap until snug. d) Checking the tightness of the probes regularly, past the slide buckle. Remove the collar from your pet and trim the strap. Apply a flame to seal the cut edge. Training your pet in the new wireless fence area is crucial for successful adaptation. This training will grant your pet more freedom to play and enjoy the yard. Each 10-15 minute session, three times a day, should be conducted over a minimum of 14 days. After each session, spend at least five minutes playing with your pet. Welcome to your new PetSafe Free to Roam Wireless Fence. Setting up the wireless fence typically takes less than a day. To determine the desired pet area, first place the base unit indoors and ensure it is two to four feet above ground level. The location should be weatherproof and at least three feet away from metal or appliances. Once you've determined the size of the fence, place the base unit in the middle of the desired area. Follow these steps: connect the adapter to the power jack on the base unit, plug it into a standard electrical outlet, and set the stimulation level for the collar using the test light tool. To install the battery, use the battery key and twist to lock. Align the arrow with the lock symbol to turn on the collar. To ensure proper function, test the collar on the boundary by holding the probes against the wire, positioning the collar under the tool at the height of your pet's neck, and walking toward the boundary until the collar beeps and the test light tool flashes. Place a flag where the collar starts to beep and repeat around the boundary every five feet. It is essential to adjust the collar fit correctly by swapping short probes with long ones for pets with long or thick fur, tightening the probes using the wrench, and ensuring proper strap adjustment. Periodically check the tightness of the probes to keep the collar secure. When using the probe on your pet, ensure there's enough space for one finger between the device and their neck. It's crucial that both probes make contact with the skin for effective correction. If the strap is too long, you'll need to trim it; start by gathering necessary materials. For young pets or those with thick winter coats, leave some extra room on the strap. To adjust, mark the strap about two inches past the buckle, remove the collar, and cut the excess material. Use a flame to seal the edge. Training is vital for your pet to understand the designated area, covering topics like settings, boundaries, distractions, and eventually off-leash training within the area. Each session lasts 10-15 minutes, three times daily, with a minimum recommended duration of 14 days. End each session with at least 5 minutes of playtime. Be aware that the first battery might drain quicker due to frequent use during the initial training phase.